

POPCORN MAKER

ENGLISH

READ THESE INSTRUCTIONS BEFORE USING THE POPCORN MAKER SAVE THESE INSTRUCTIONS!

DEUTSCH

LESEN SIE DIESE BEDIENUNGSANLEITUNG VOR DEM VERWENDEN DES POPCORN MAKER UND DIESE ANWEISUNGEN AUFBEWAHREN!

POLSKI

PRZED ROZPOCZĘCIEM KORZYSTANIA Z URZĄDZENIA POPCORN MAKER PRZECZYTAJ TE INFORMACJE I ZACHOWAJ NINIEJSZĄ INSTRUKCJĘ!

FRANÇAIS

LISEZ CES INSTRUCTIONS AVANT D'UTILISER LE FABRICANT DE POPCORN MAKER ET CONSERVEZ CES INSTRUCTIONS!



ENGLISH

IMPORTANT SAFE GUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surfaces, use handles or knobs.
3. To protect against electrical shock DO NOT immerse the cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner.
7. The appliance manufacturer does not recommend the use of accessory attachments, this may cause injuries.
8. DO NOT use outdoors.
9. DO NOT let the cord hang over the edge of table or counter tops or touch hot surfaces.
10. DO NOT place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be taken when moving this appliance.
12. DO NOT use the appliance for other than its intended use.
13. DO NOT leave unit unattended while in use or when plugged in to an outlet.
14. This appliance will shut off automatically. To avoid overheating, add corn kernels before operating. It is recommended to wait 15 minutes between making more popcorn so the appliance can cool down.
15. Extreme caution must be taken when unloading the popcorn.
16. A short power supply cord is provided to reduce the risk of becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is taken in its use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instructions concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS!
IMPORTANT PRECAUTIONS

Appliance Specifications:
220V-240V
50Hz-60Hz
1200W

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. This unit uses hot air. Do not use butter or oil or water in the popping chamber.
- G. DO NOT touch hot surfaces. Unit will become HOT when popcorn is popping.

1

POPCORN MAKER

ENGLISH

READ THESE INSTRUCTIONS BEFORE USING THE POPCORN MAKER SAVE THESE INSTRUCTIONS!

DEUTSCH

LESEN SIE DIESE BEDIENUNGSANLEITUNG VOR DEM VERWENDEN DES POPCORN MAKER UND DIESE ANWEISUNGEN AUFBEWAHREN!

POLSKI

PRZED ROZPOCZĘCIEM KORZYSTANIA Z URZĄDZENIA POPCORN MAKER PRZECZYTAJ TE INFORMACJE I ZACHOWAJ NINIEJSZĄ INSTRUKCJĘ!

FRANÇAIS

LISEZ CES INSTRUCTIONS AVANT D'UTILISER LE FABRICANT DE POPCORN MAKER ET CONSERVEZ CES INSTRUCTIONS!



ENGLISH

IMPORTANT SAFE GUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating this appliance.
2. DO NOT TOUCH the hot surfaces, use handles or knobs.
3. To protect against electrical shock DO NOT immerse the cord, plug or any part of this unit in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before removing parts for cleaning.
6. DO NOT operate any appliance with a damaged cord or plug or if the appliance has been damaged in any manner.
7. The appliance manufacturer does not recommend the use of accessory attachments, this may cause injuries.
8. DO NOT use outdoors.
9. DO NOT let the cord hang over the edge of table or counter tops or touch hot surfaces.
10. DO NOT place on or near a hot gas or electric burner or in a heated oven.
11. Extreme caution must be taken when moving this appliance.
12. DO NOT use the appliance for other than its intended use.
13. DO NOT leave unit unattended while in use or when plugged in to an outlet.
14. This appliance will shut off automatically. To avoid overheating, add corn kernels before operating. It is recommended to wait 15 minutes between making more popcorn so the appliance can cool down.
15. Extreme caution must be taken when unloading the popcorn.
16. A short power supply cord is provided to reduce the risk of becoming entangled or tripping over a long cord.
17. Longer detachable power supply cords can be used if care is taken in its use.
18. The marked electrical rating of an extension cord should be at least as great as the electrical rating of the appliance.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are given supervision or instructions concerning use of the appliance by a person responsible for their safety.
20. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS!
IMPORTANT PRECAUTIONS

Appliance Specifications:
220V-240V
50Hz-60Hz
1200W

- A. NEVER immerse in water.
- B. NEVER use near water.
- C. NEVER use an abrasive sponge or cloth.
- D. NEVER use a scouring pad on the unit.
- E. NEVER leave unit unattended while in use.
- F. This unit uses hot air. Do not use butter or oil or water in the popping chamber.
- G. DO NOT touch hot surfaces. Unit will become HOT when popcorn is popping.

1